

MODEL: 51006WS

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.



MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN


YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: COLUMN, FOUNTAIN BODY, RESERVOIR, PUMP AND TRANSFORMER.

FOUNTAIN ASSEMBLY


1. REMOVE THE RUBBER GASKET FROM PLASTIC TUBE.

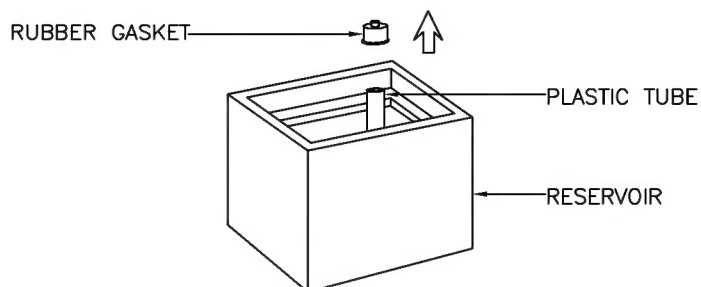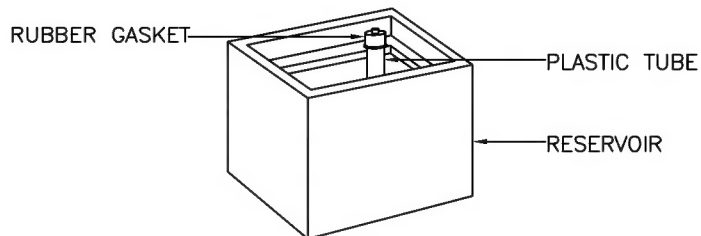


2. FEED THE PUMP POWER CORD THROUGH THE PLASTIC TUBE TOWARD BOTTOM OF RESERVOIR, CORD EXITS OUT FROM CHANNEL ON BOTTOM OF THE RESERVOIR.

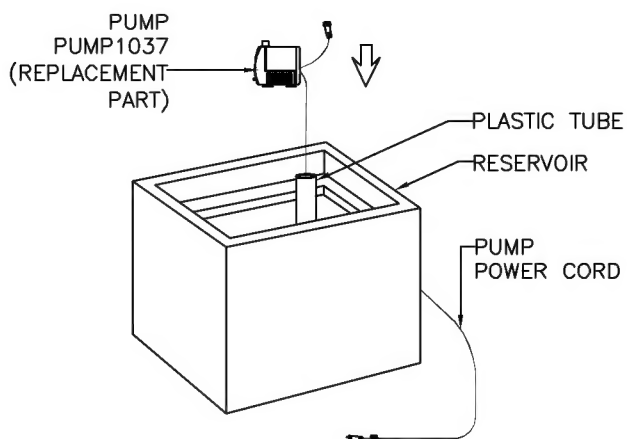

3. COVER THE HOLE OF PLASTIC TUBE WITH THE RUBBER GASKET THAT YOU REMOVED.

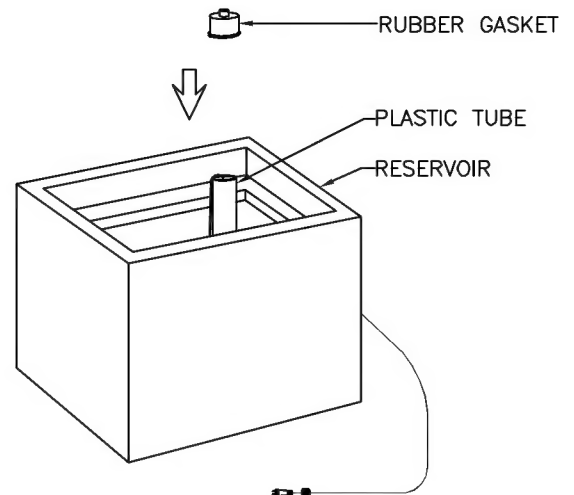


4. FEED THE RUBBER HOSE AND LIGHT POWER CORD THROUGH THE PLASTIC TUBE TOWARD BOTTOM OF THE FOUNTAIN BODY.

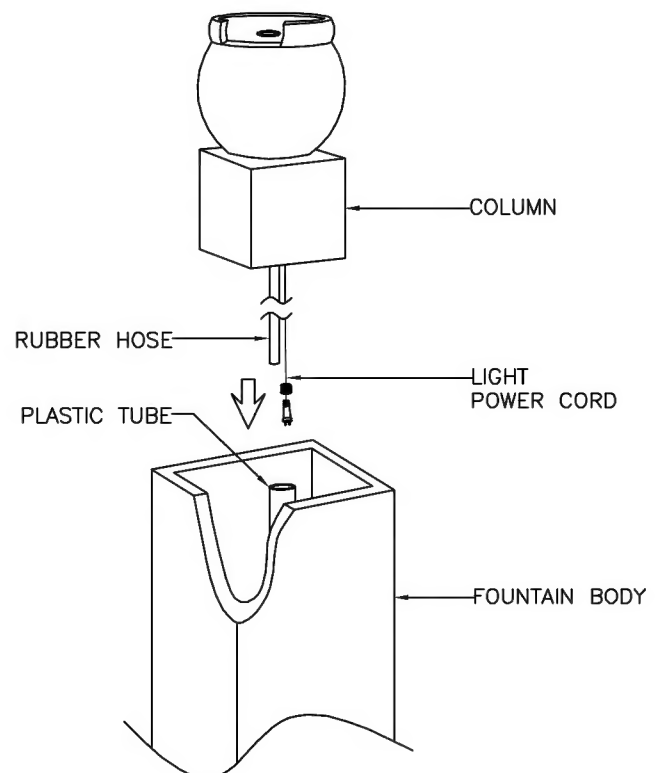

MODEL: 51006WS
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS


FOUNTAIN ASSEMBLY

5. PLACE COLUMN INTO FOUNTAIN BODY.

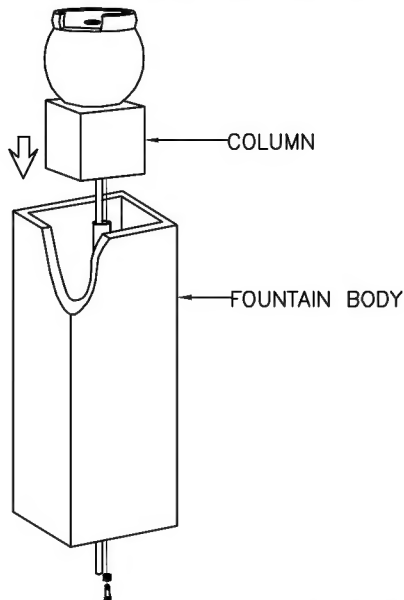


6. JOIN LIGHT CONNECTORS AND SCREW THE CAP TO CONNECTORS TIGHTLY TOGETHER.

7. ATTACH PUMP TO THE RUBBER HOSE AND PLACE THE FOUNTAIN BODY WITH COLUMN INTO RESERVOIR.

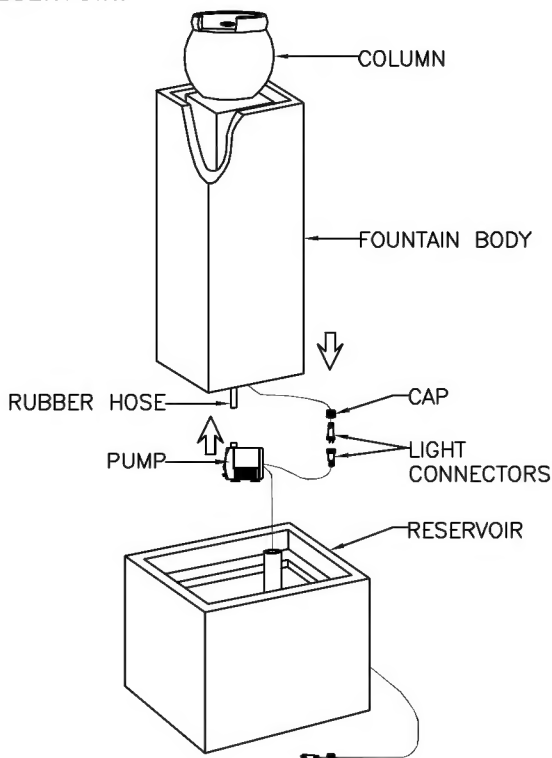

8. FILL RESERVOIR WITH 3.2 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

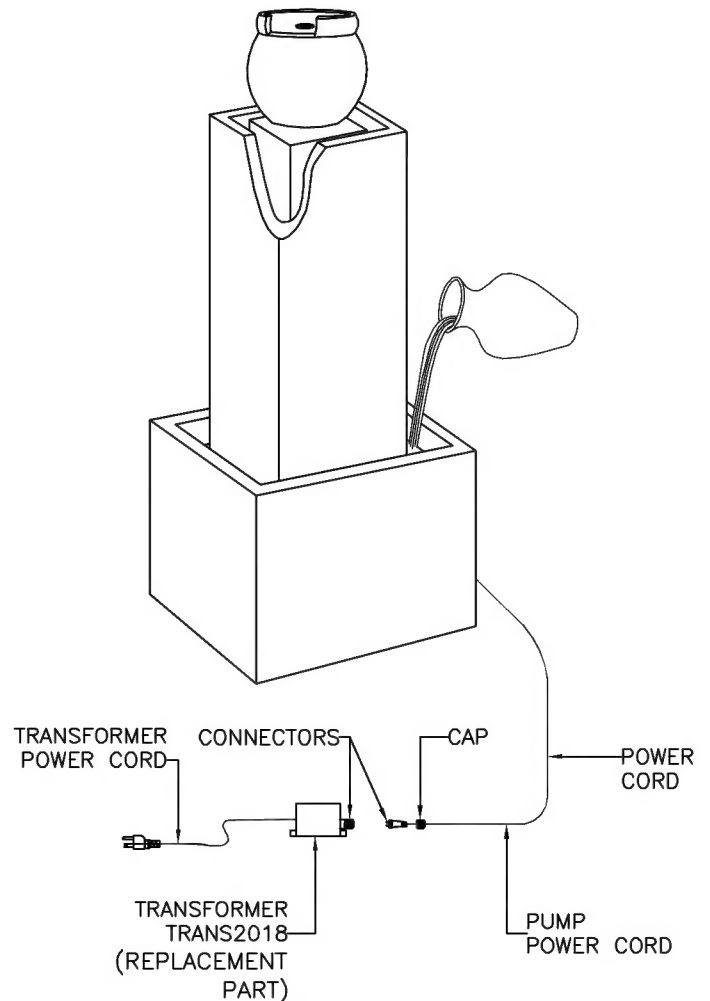

9. JOIN CONNECTORS AT TRANSFORMER AND SCREW THE CAP TO CONNECTOR TIGHTLY TOGETHER.

10. PLUG TRANSFORMER INTO OUTLET, THEN TEST WATER RUNNING, ADJUST THE WATER VALVE ON PUMP IF NEEDED.

11. YOUR NEW FOUNTAIN IS READY FOR USE.

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS FOUNTAIN IS RATED FOR INDOOR & OUTDOOR USE.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PARTS ARE:

BULB3009 (LED CLUSTER)

PUMP1037 (PUMP)

TRANS2018 (TRANSFORMER)